

- Use 20 amp fuse in high voltage line
- Relay should be mounted in an enclosure
- Heater core should be mounted in place of vehicle's original heater core. Modification of housing and fabrication of mounting supports will most likely be required.
- Note: Metal heat distribution fins of heater core are hot both physically & electrically during operation!
- Heat output is related to amount of air passing through core; low air flow will deliver low heat; higher air flow will deliver more heat.
- Heater should be wired so that it will not operate without fan.

